

QUICK START GUIDE



QUICK START



DISPLAY

You can adjust height and tilt from displays on both sides of the table. Height from 84cm to 144cm – tilt up to 22 degrees.



TILT AND HEIGHT

The display shows 3 options: 1) adjust height 2) tilt to one side 3) tilt to the other side. Press (a) to switch between the options.



SETTINGS

You can save 4 settings – 2 on each side of the table 1) adjust the table to the desired height and tilt 2) press § until it blinks and then •. Now you have set setting one. To save setting two, do the same and press •.

When you want the table to go to the preset height, simply press • or • and the table will adjust automatically.

QUICK START



BATTERY

The table has a battery that will last 3-5 days without charging depending on use. Under your display is the battery indicator



ROLL HOLDER

You can use this for application tape, vinyls or print to make work flow easier.



ANTISTATIC WHEELS

Move the table to where you want to work, and lock the wheels for stability